

#1 - Remove the spring by unscrewing the retaining ring with a small pipe wrench. The spring will have quite a bit of tension when the nut comes free. Use an empty box placed in front of the nut to catch it.



#2 - Clean small flats on gas tube



#3 - Clean cupped washer



#4 - Slide cupped washer onto gas tube with the flat side down



#5 - Slide bushing onto gas tube and into cupped washer



#6 - Thread retaining ring onto gas tube with groove towards the bushing  
You may use threadlocker on threads



#7 - Tighten with small pipe wrench and you are finished



I hope this helps you feel comfortable with the installation.

Regards,

Jeffrey Hajjar  
President  
SRM Arms, Inc.  
4375A West McMillan  
Meridian, ID 83646  
208-887-9395  
[www.srmarms.com](http://www.srmarms.com)